 


## kit consists of:

- (3) WOOD RODS (3) PLASTIC TIPS FOR RODS
- (1) PLASTIC HANGING HOOK WITH CORD

## ASSEMBLY INSTRUCTIONS



Assemble triple-socket and stem as shown, being sure TOP side of triple-socket is facing up, sure TOP side of triple-socket is facing up, sure to the standard of the standard

Unwind cord from plastic hook. Tie one end of cord to slotted hole at bottom of hanging hook. Then insert barb at other end of cord through hole in top of stem.



Fit plastic tips on one end of each wood rod. Holding wood rod close to end without plastic tip), insert into channel of socket at slight downward angle until it protudes at bottom. Then straighten and slider of towards center of socket as far as it will go. Keeping a firm grip on the partial assembly, statch remaining wood rods in same manner. Be sure all rods are completely inserted.



4 Slide banners over wood rods as illustrated. Then lift display carefully to hanging position.



HANGING

CORD

The plastic hook is specially designed to hang securely onto channel strip of lay-in ceiling, light fistures, over wire and other available overhead conditions. The hanging cost tightly to hole in bottom of hook. Long ventical slot at bottom fits into rigid tube or other litting device for convenient litting device for convenient.